

Bicycle instruction manual Convy


Be well prepared for your drive! Read this card before use and always make a test ride.



1. Lock

Always unlock the bike before using the bike.

Attention: Always make sure that the valve does **not** make contact with the lock

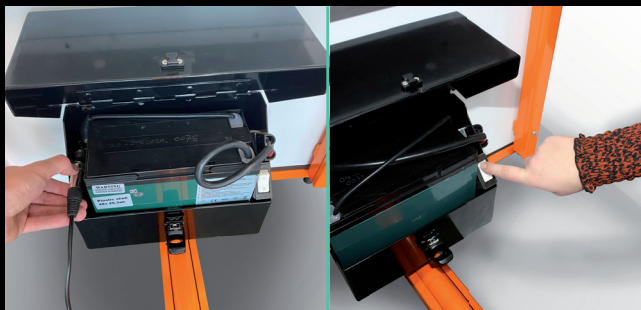

2. Disconnecting the battery charger

The battery is located at the rear of the box. Detach the charger plug from the battery. **Attention:** A non-proper detachment will cause damage to the battery and/or charger. Place the charger plug on the shelf. Then turn the white switch to **I**. Close the lid and lock the latch.



3. Connecting the battery charger

Unlock the battery box. Put the switch to **O**. Take the charger plug off the shelf and connect it to the battery plug. Perform this action with care!



4. Electrical system

The controls of the electrical system are located next to the left-hand grip (green circle). The system can be turned on and off by pressing on the on/off button for 2 seconds. The speed can be read on the left side of the display (yellow circle). The level of support can be read on the right side of the display (orange circle).



5. Tires

It is of importance that the tires have the right tire pressure. Place the air hose on the valve and inflate the tires.
Tire pressure rear tire: 4,0 bar
Tire pressure front tire: 3,0 bar
Check whether the tires are correctly positioned on the rims.



6. Brakes

The left lever operates the front brakes and also includes the parking brake. See the image on how to operate the parking brake. The right lever operates the rear brakes.

Bicycle instruction manual Convy

Be well prepared for your drive! Read this card before use and always make a test ride.



7. Saddle height

The saddle height can be adjusted by loosening the quick-release (green circle) and placing the saddle higher or lower. Make sure that the saddle is set at hip height. The proper cycling posture is when the knee is lightly bent when the pedals are at its lowest point.



8. Gears

A. Shifting gears with a shifter. This stepless shifter is located at the right-hand grip. The gears are stepless. When taking off the lowest gear should be used. Always shift gears while cycling and keeping the pedals still for a moment. **B. Automatic gear shifter.** The bicycle automatically shifts gears. There is no shifter present.



9. Motor modes

The level of support can be altered with the controls of the electrical system. Pressing the + button, the support will be increased and with the – button the support will be decreased. Pressing the button shortly is already sufficient. The level of support has a range from 1 till 5.



10. Lighting

The Convy has two front lights and one rear light. The lighting can only be turned on by using the + button (see image) and **not** at the lights themselves. Turn on the lights by pressing on the + button for 2 seconds.

Attention: Make sure that the electrical system is turned on (see point 2).



11. Throttle lever

At the right hand grip a throttle lever is located. This lever will make sure that the bicycle is moving forward with a maximum of 6km/h. This lever can be used to walk with the cargo bicycle. This function will only work in position 0 of the electrical system. **Attention:** Make sure the gears are in the lowest position.



12. Corner posture

While taking corners, stay as straight as possible on the bicycle. Leaning into the corners could cause the bicycle to tilt at high speeds. **Attention:** Take the corners with a suitable speed. Always drive up a bump or slope straight from the front, not sideways.